




CiF LAB
SOLUTIONS

Wing[®] - Overhead Service Carrier

Features and Benefits:

The Wing[®] is a starter and adder overhead service distribution system that is flexible enough to work with your current or future service and communication needs and can be ordered to accommodate lighting, center snorkels and offset snorkels. Pre-plumbing, pre-wiring and exhaust options are available through CiF Lab Solutions. In addition, with longer lead times custom uplighting can be ordered from CiF Lab Solutions.

The modular design of the Wing[®] allows for multiple units to join together with a single - or multiple - umbilical feeding services throughout the units. The slim design of the Wing[®] makes it an ideal solution when ceiling height is limited. Ceiling suspension allows service connections along the entire system length. For services in the wall, half Wing[®] wall-mounted versions are available.

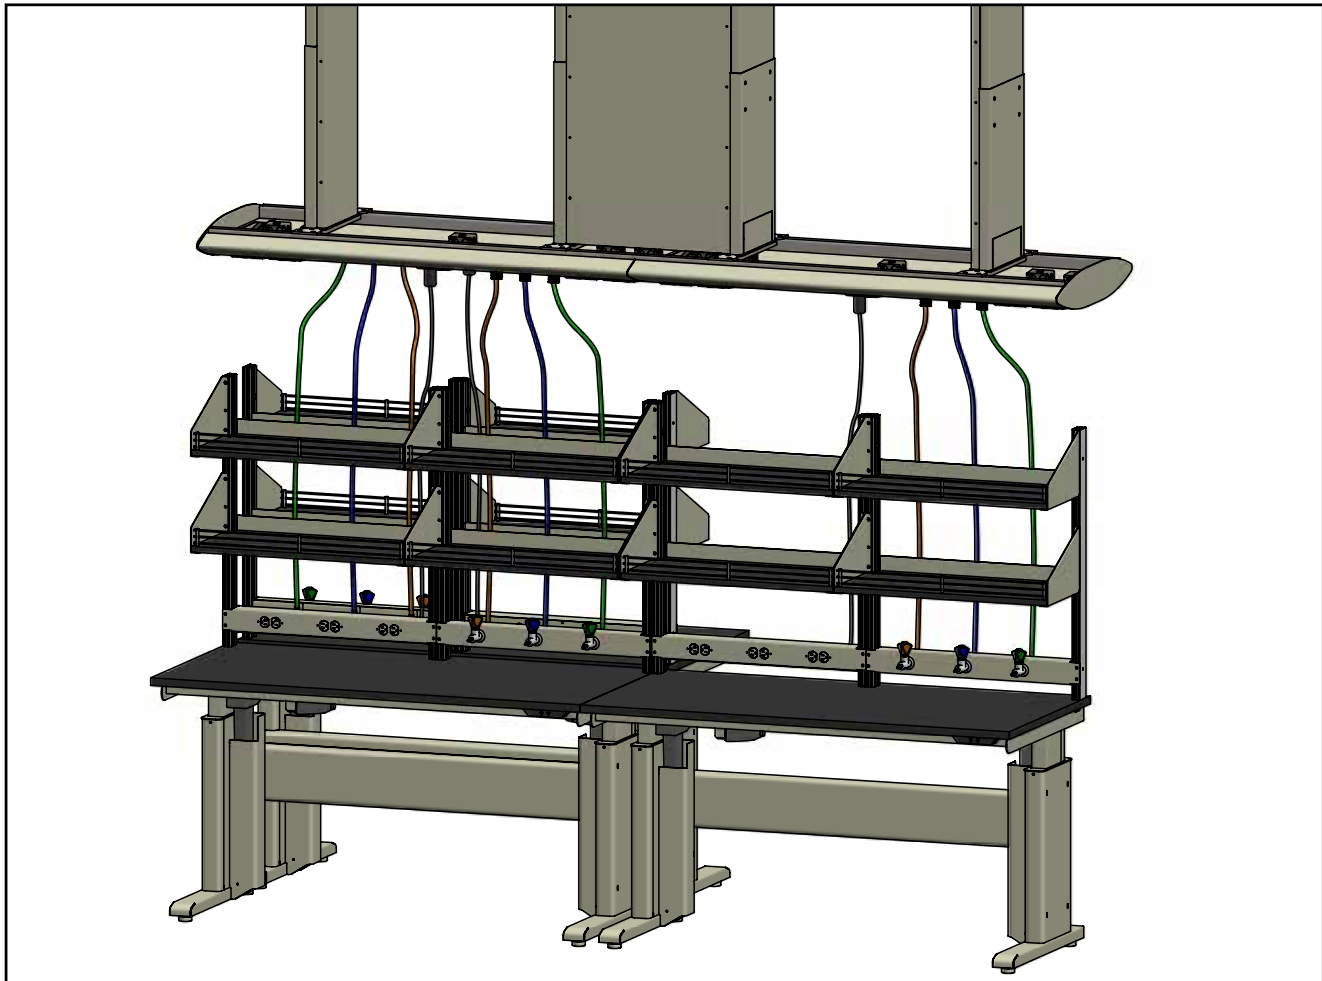

Product Description and Characteristics:

The Wing[®] distribution system is a formed steel suspended overhead service carrier that is designed to carry services including water, vacuum, gasses, electrical, data and communications. Each section shall have pre-punched plumbing and electrical fixture openings. To achieve multiple section runs, you must move one end-cap from the starter section to the end of the adder section. Only one starter unit is needed per run. For suspension, incorporate umbilicals and end umbilicals for every service run. Refer to our laboratory specifications for details.

Finish:

All steel frame components shall be finished using a baked-on powder-coat finish. Standard colors include black, grey, light neutral, and white.

Pre-Plumbing and Pre-Wiring:

Pre-plumbing and pre-wiring is available at the CiF Lab Solutions factory. All supply line are systematically routed and securely clamped inside.

Fabrication:

The Wing[®] is shipped in single (36-, 24-, 60-, and 72-inch) sections or in runs (final length may vary). CiF Lab Solutions may choose to use foam end covers, pallets, shipping pads and shrink wrap; which all can be specified by the customer.

Warranty:

All standard products manufactured by CiF Lab Solutions carry a two (2) year guarantee and Limited Warranty from the date of substantial completion to the original owner against defective material and workmanship. Refer to our full warranty for further details.