




FUSION SERIES

Thermally Fused Laminate Casework with Premium Wood Faces

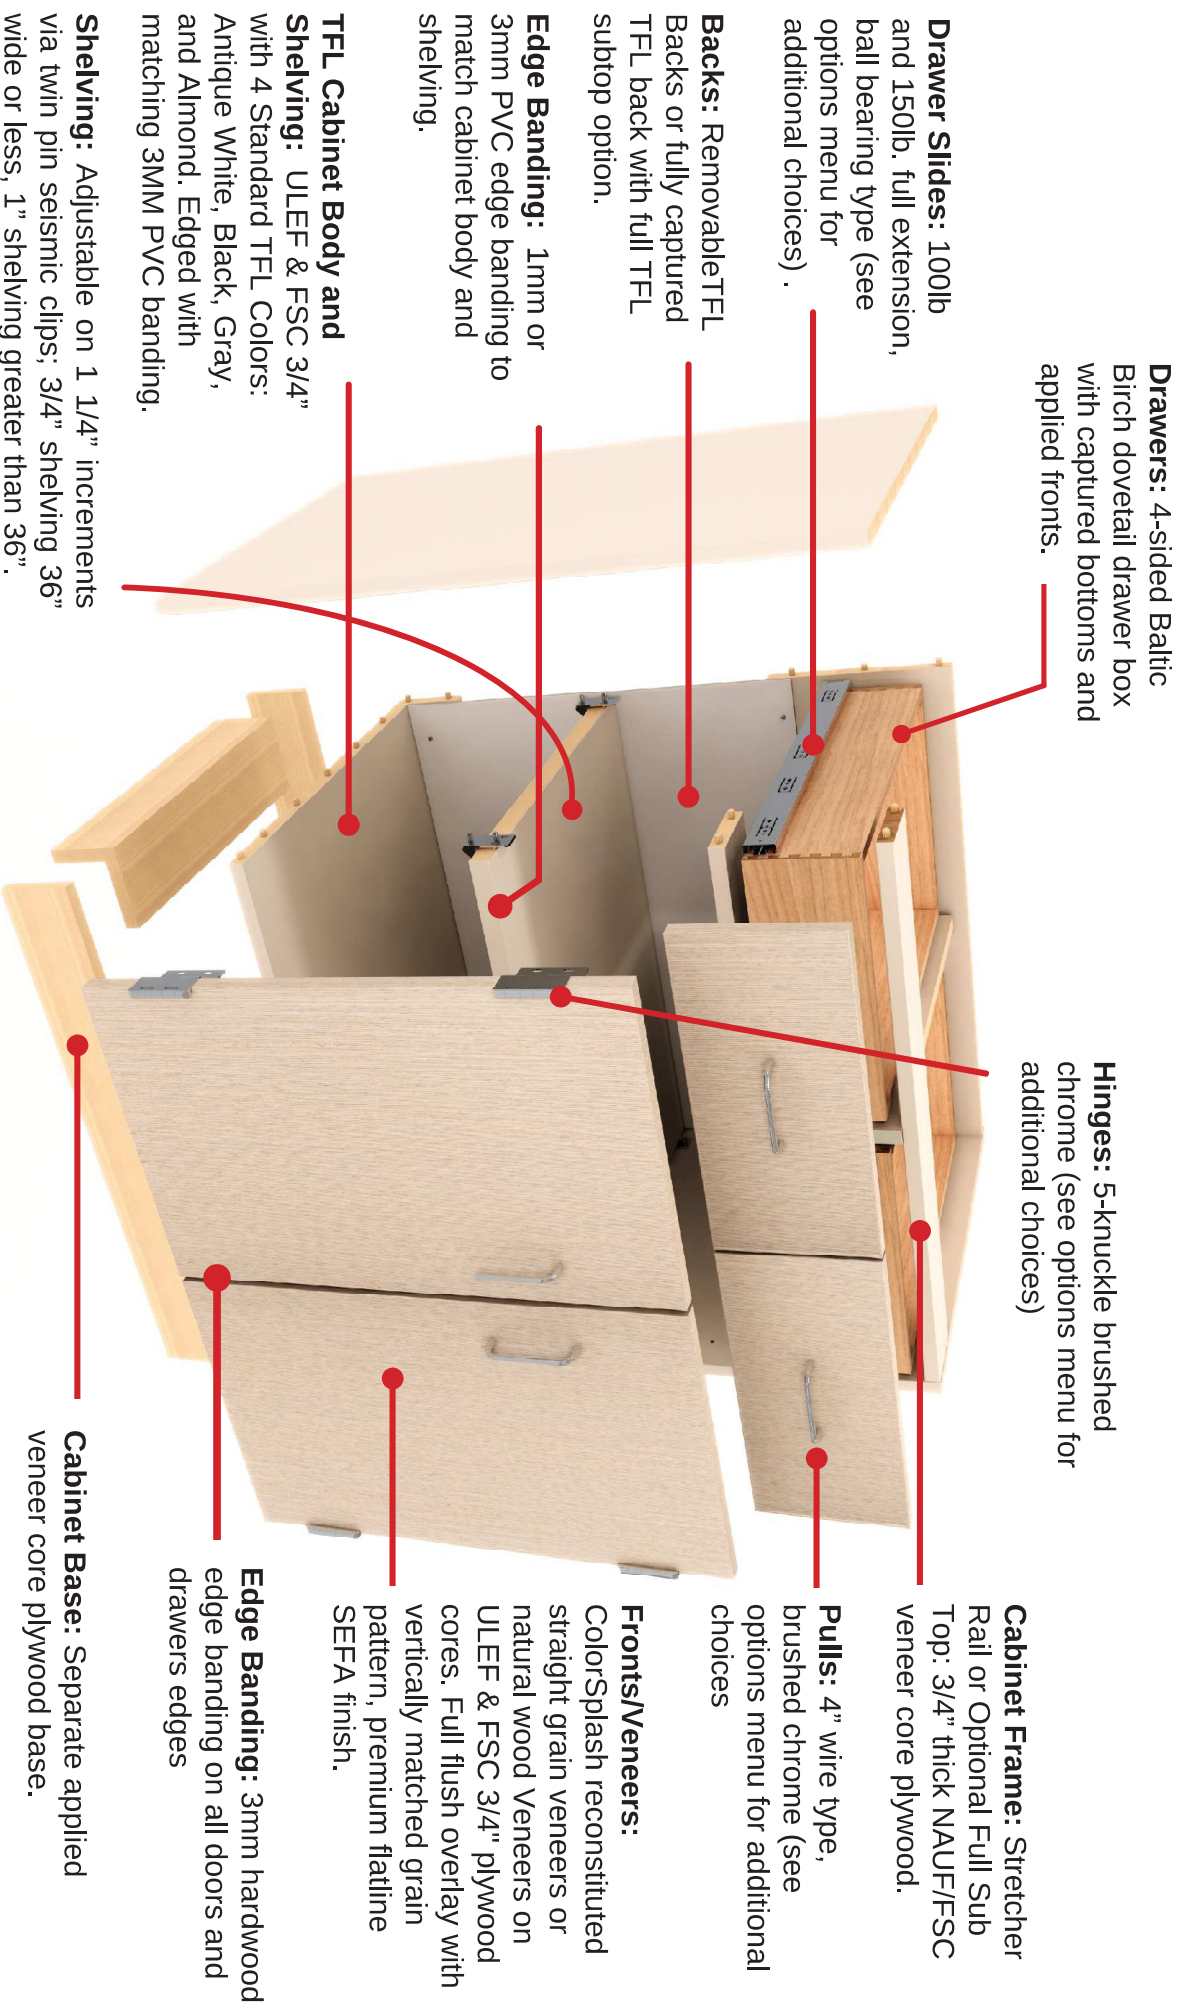

Drawers: 4-sided Baltic Birch dovetail drawer box with captured bottoms and applied fronts.

Hinges: 5-knuckle brushed chrome (see options menu for additional choices)

Cabinet Frame: Stretcher Rail or Optional Full Sub Top: 3/4" thick NAUF/FSC veneer core plywood.

Drawer Slides: 100lb and 150lb, full extension, ball bearing type (see options menu for additional choices) .

Pulls: 4" wire type, brushed chrome (see options menu for additional choices

Backs: Removable TFL Backs or fully captured TFL back with full TFL subtop option.

Edge Banding: 1mm or 3mm PVC edge banding to match cabinet body and shelving.

Fronts/Veneers: Color Splash reconstituted straight grain veneers or natural wood Veneers on ULEF & FSC 3/4" plywood cores. Full flush overlay with vertically matched grain pattern, premium flatline SEFA finish.

TFL Cabinet Body and Shelving: ULEF & FSC 3/4" with 4 Standard TFL Colors: Antique White, Black, Gray, and Almond. Edged with matching 3MM PVC banding.

Edge Banding: 3mm hardwood edge banding on all doors and drawers edges

Shelving: Adjustable on 1 1/4" increments via twin pin seismic clips; 3/4" shelving 36" wide or less, 1" shelving greater than 36".

Cabinet Base: Separate applied veneer core plywood base.