

# EDUCATOR SERIES

Wood Casework Solutions For Life. Learning. Discovery.



**CiFLAB**  
SOLUTIONS



# Always True to Your Vision.

## CiF Lab Solutions Experience

**Premium Products. Quality Service. On-Time Delivery.**

With decades of experience in manufacturing premium Tier One wood casework products, CiF Lab Solutions has the knowledge and expertise to deliver your project complete, on-time and within budget. Our team of estimators, engineers, project managers and production employees will support your interior buildouts in a collaborative manner.

Our values, commitment to excellence, flexibility and years of experience give CiF Lab Solutions the edge and resilience to continue as the leader in wood casework manufacturing. The Educator Series will allow CiF and its dealer partners to answer all of your project needs and always ***stay true to your vision.***



## Commitment to Excellence


**Tier One Quality. For Educational Environments.**

We select the highest quality red oak and maple plain sliced AA veneers to ensure consistency in grain and color. The Educator Series features vertical grain matched fronts with premium reveals of 1/16" on cabinet ends, providing 1/8" reveals from cabinet to cabinet. The result: perfectly symmetrical lines that deliver an aesthetically pleasing style. **Configurations include:** base, wall, fixed, mobile and suspended cabinet options.

The Educator Series cabinet line is perfect for your science, art, consumer careers, technology and general education classroom applications. Additionally, custom cabinet designs are available.





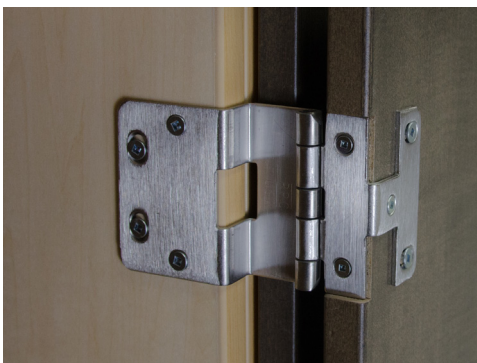

## High Performance Materials For Your Wood Casework

**Built to Last. Strong. Certified.**

Quality lasts. That's why we design and fabricate our casework to accommodate a variety of environments and maintain the beauty of wood throughout its entire life cycle. We build and finish our cabinets in compliance with Scientific Equipment and Furniture Association (SEFA-8W) standards. Having SEFA-8W certification aligns the performance characteristics of our wood casework to the same quality utilized by the laboratory and university markets. In addition, our team has demonstrated the ability to fabricate, finish and install wood casework in accordance with the Architectural Woodwork Institute's Quality Certification Program (AWI-QCP) standards.

## LEED Credit Contributions

**Environmentally Responsible. Sustainable.**

Our standard ULEF core/panel substrates can contribute toward LEED® certification credit **EQ4.4 low emitting materials**. Additionally, the Educator Series is constructed with Forest Stewardship Council® (FSC) certified materials, qualifying it for contribution toward LEED® certification credit **MR 7 certified wood**. Finally, when standard particle board construction for door and drawer fronts is selected, these components can contribute towards qualification for **MR 4.1 and 4.2 recycled content**.



## The Educator Series

**Clean Lines. Refined Aesthetic.**



## Educator Series I

**Integral End Panels. Traditional Look.**

A traditional full flush overlay casework style with integral end panels.



## Educator Series II

**Applied End Panels. Furniture Appearance.**

Same premium construction details and materials, but features applied end panels for a “furniture-like appearance”.






## More Than Meets the Eye


### A “Tier One” Solution for the Educational Classroom.




**Environmentally Sustainable:** North American veneer core plywood with ULEF and FSC® certification.

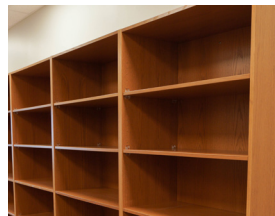

**Interiors on Display:** All open and glazed glass door interiors finished to match red oak or maple exterior species and stain.

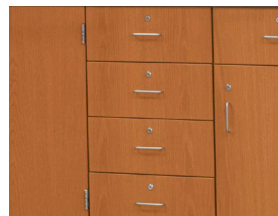

**Rich Exterior Finish:** Plain sliced, vertical grain matched red oak or maple exteriors.

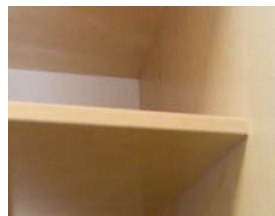

**Clear Finished Basswood Interiors:** In semi-exposed locations.




**Durable Edge Banding:** 3mm hardwood edge banding on all doors, drawers and finished ends. 3mm matching PVC edge banding for cabinet frames and internal shelving.



**Heavy Duty Storage Drawers:** 4-sided dovetail drawer box with captured bottom (white melamine standard and plywood optional) with 100lb or 150lb full extension ball bearing drawer slides.




**Captured Backs:** Fully captured with an option for removable backs at service maintenance locations (white melamine standard and plywood optional).

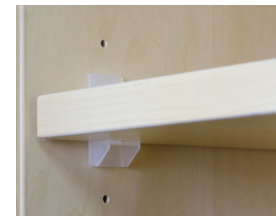

**Adjustable Shelving:** 3/4" shelving 36" wide or less, and 1" shelving greater than 36" wide, adjustable in 1 1/4" increments with twin pin seismic clips.



**Stunning Finish that Lasts:** Premium flatline finishing that meets AWI-QCP and SEFA 8W finishing standards.

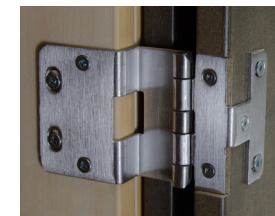

**Superior Hinges:** Brushed chrome 5 knuckle hinges standard (stainless steel optional), meets stringent SEFA standards.



**Quality Pulls:** Brushed chrome pulls standard (stainless steel optional), provides form and functionality.



**Configurations to Fit Your Space:** Educator's full product offering includes wall, base, tall, suspended and mobile cabinet styles for all educational classroom needs.




**General Classrooms**







**Traditional “Built-in” Classrooms**







**Custom Science Classrooms**







**“Claboratories”**





**STEM/STEAM**





**Maker Spaces**



## CiF Lab Solutions LP

53 Courtland Ave. Vaughan ON, L4K 3T2

Phone: 905.738.5821 | Follow Us: [!\[\]\(c507f772dba2b921f86777f01218e570\_img.jpg\)](#) [!\[\]\(a75296508989caaa77a08d26cfccd4e5\_img.jpg\)](#) [!\[\]\(55463e2fc8fd9dd5cdf6584182081aba\_img.jpg\)](#)

Email: [info@cifsolutions.com](mailto:info@cifsolutions.com) | [www.cifsolutions.com](http://www.cifsolutions.com)

