


# EDUCATOR SERIES

Wood Casework designed to meet your budget

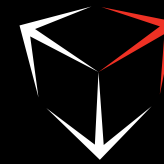

**CiFLAB**  
SOLUTIONS

- A Drawers:** 4-sided dovetail drawer box with captured bottoms and applied fronts.
- B Drawer Slides:** 100 and 150 lb. full extension, ball bearing type.
- C Captured Backs:** Fully captured with an option for removable backs at utility locations (white melamine standard, optional plywood shown)
- D Cabinet Body and Shelving:** NAUF/FSC veneer core plywood.
- E Shelving:** Adjustable on 1 1/4" increments via twin pin seismic clips; 3/4" shelving 36" wide or less, 1" shelving greater than 36"
- F Interiors:** Clear finished basswood veneer at semi-exposed locations; finished to match exterior at exposed locations.
- G Cabinet Base:** Separate applied veneer core plywood base.
- H Edge Banding:** 3mm hardwood red oak or white maple edge banding on all doors and drawers; 3mm matching PVC edge banding for basswood cabinet body and shelving.
- I Fronts/Cores:** ULEF & FSC 3/4" particle core plywood, edge banded with 3mm hardwood.
- J Fronts/Veneers:** Grade AA plain sliced red oak or white maple, full flush overlay with vertically matched grain pattern, premium flatline SEFA finish (entire cabinet- interior/exterior).
- K Pulls:** 4" wire type, brushed chrome (powder coated or stainless steel optional).
- L Cabinet Frame:** Full sub Top 3/4" thick NAUF/FSC veneer core plywood.
- M Hinges:** Standard 5-knuckle brushed chrome (powder coated or stainless steel optional) option.

