


M-LINE (PAINTED MDF CASEWORK)

Contemporary Styling Casework with Optional Premium Wood Faces

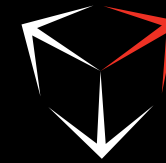

CiFLAB
SOLUTIONS

- A Drawers:** 4-sided Baltic Birch dovetail drawer box with captured bottoms and applied fronts.
- B Drawer Slides:** 100lb and 150lb. full extension, ball bearing type (see options menu for additional choices).
- C Shelving:** Adjustable on 1 1/4" increments via twin pin seismic clips, metal L-shaped supports, or recessed mounted shelf standards with pilaster clip; 3/4" or 1" shelving.
- D Cabinet Body and Shelving:** 3/4" Painted and Sealed MR50 rated MDF cores.
- E Cabinet Base:** Separate applied veneer core plywood base.
- F Hinges:** 5-knuckle brushed chrome (see options menu for additional choices).
- G Fronts:** Painted MDF, full flush overlay 3/4" MDF (MR50) cores. Premium painted and sealed finish. Optional wood faces available.
- H Pulls:** 4" wire type, brushed chrome (see options menu for additional choices).
- I Cabinet Frame:** Stretcher frame or optional full sub top: 3/4" thick MDF.

