


TRADITIONAL WOOD SERIES III

Traditional Design and Construction - Casework Built to Last

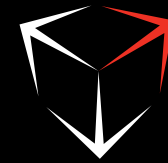

CiFLAB
SOLUTIONS

- A Drawers:** Solid 1/2" hardwood or 4-sided baltic birch dovetail drawer box with captured baltic birch plywood bottoms.
- B Drawer Slides:** 100 and 150 lb. full extension, ball bearing type.
- C Captured Backs:** Fully captured 1/4" veneer core plywood to match cabinet interiors.
- D Shelving:** Adjustable on 1 1/4" increments via twin pin seismic clips; 1" thick shelving with 3/8" hardwood edge banding.
- E Cabinet Body and Shelving:** 7-Ply Veneer Core Plywood with a 3/8" hardwood edge banding.
- F Interiors:** Semi exposed Interiors to match the exterior veneer selection.
- G Edge Banding:** 5mm Hardwood
- H Cabinet Base:** Separate applied veneer core plywood base.
- I Fronts/Cores:** Particleboard core with hardwood stile on the hinge side.
- J Fronts/Veneers:** Grade AA plain sliced red oak or white maple, full flush overlay with center balanced and vertically matched veneers. Premium flatline SEFA finish (entire cabinet-interior/exterior).
- K Pulls:** 4" wire type, brushed chrome (powder coated or stainless steel optional).
- L Cabinet Frame:** Full Top Frame construction.
- M Hinges:** Standard 5-knuckle brushed chrome (powder coated or stainless steel optional).

